


Part # 244RLC Jato Alum. front bumper

Instruction Sheet

1. Remove all fuel from truck.
2. Turn truck upside down. Your going to remove a total of 6 screws from the bottom of the truck in the front end of the chassis plate.

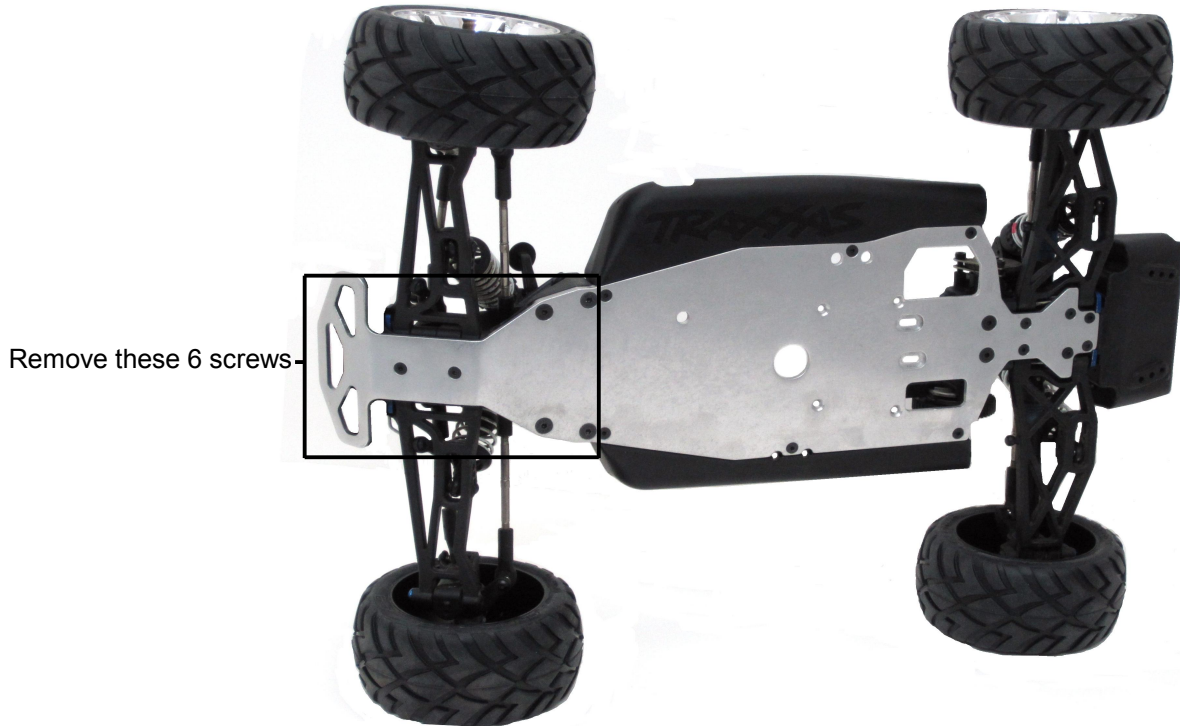

3. Place the new bumper on top of truck as shown. The new bumper gets bolted over the old bumper. Get all six screws started by hand then proceed to tighten them all down.

