


Part # 248RLC Jato Super Brace

Instruction Sheet

1. Remove all fuel from truck.
2. Turn truck upside down. Your going to remove a total of 12 screws from the bottom of the truck that are located in the boxes in the pic below. Do not remove the engine mount screws located in the two slots in the chassis.
3. Place the brace on top of truck and get all 12 screws started by hand. The brace is a perfect fit and if the chassis plate is a little tweaked some times you you need to put some added pressure on the brace to get the holes to line up.

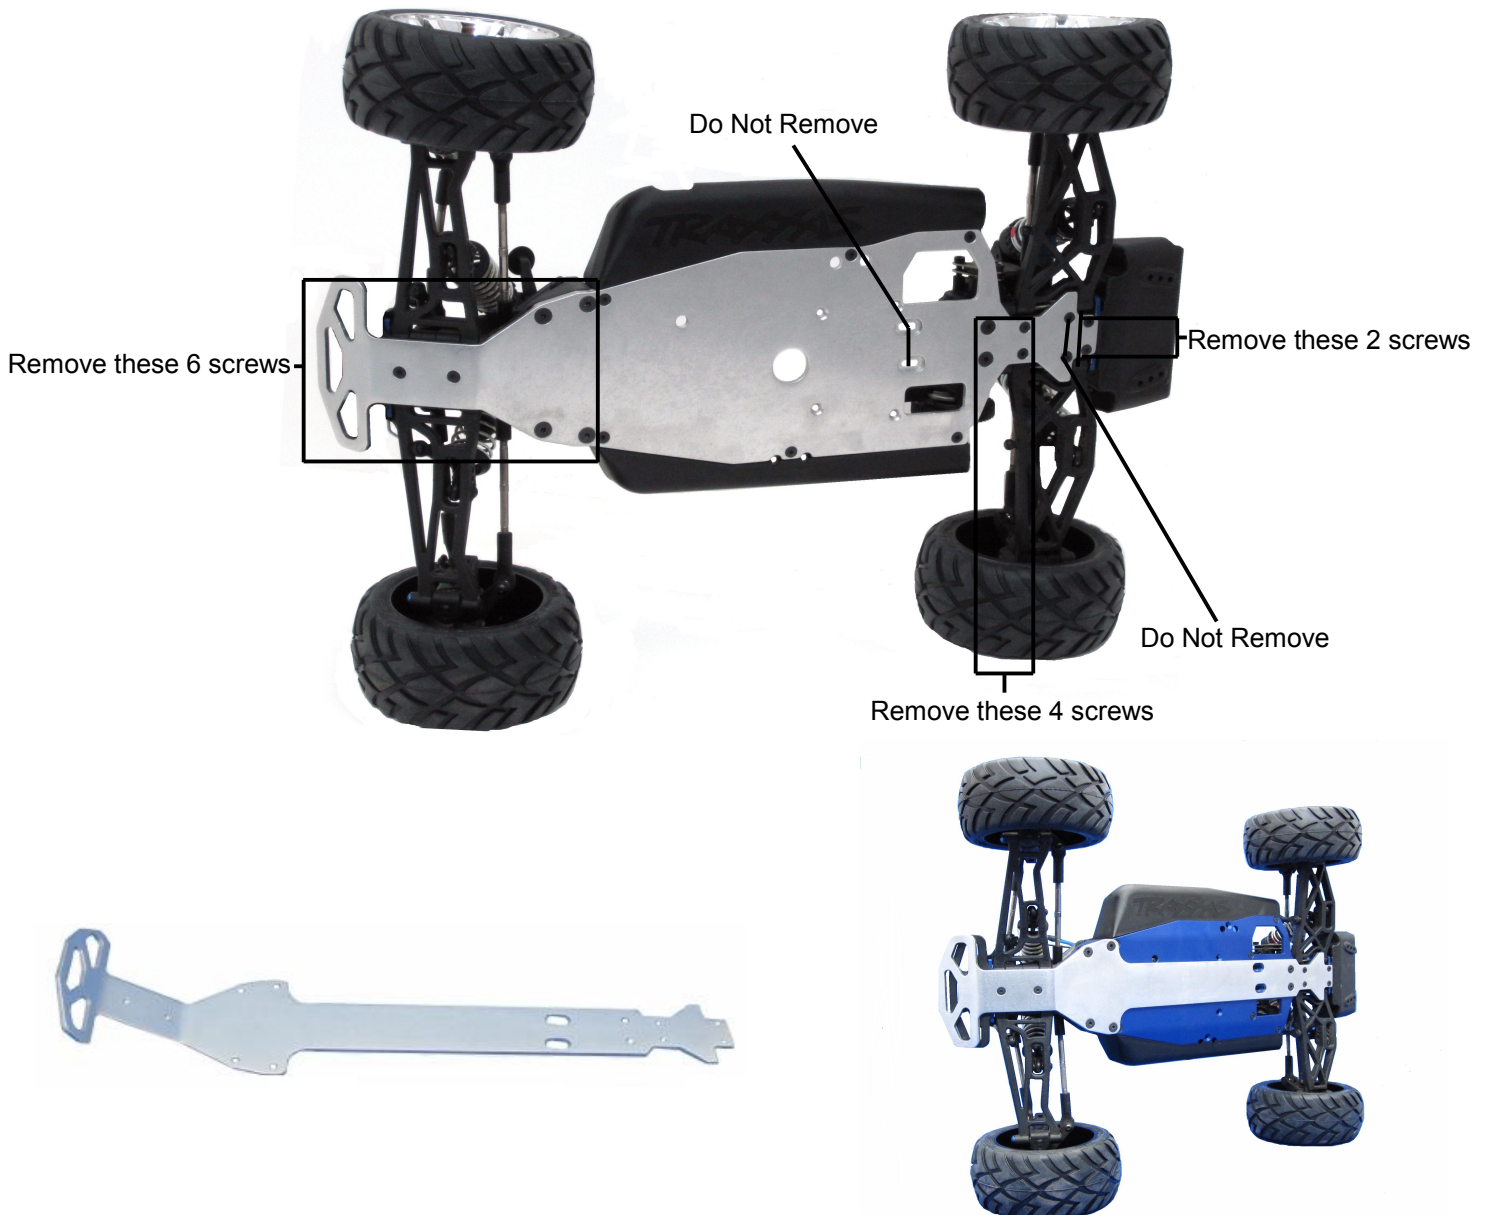

Any technical question call (732) 269-5628 Mon – Fri 9 Am to 6 PM EST. Or go the website tech section www.rlochobbies.com