



Part # 244RLC Jato Alum. front bumper

Instruction Sheet

1. Remove all fuel from truck.
2. Turn truck upside down. And remove these two screws first. Next loosen these six screws. This will help you remove the rear trans cover.

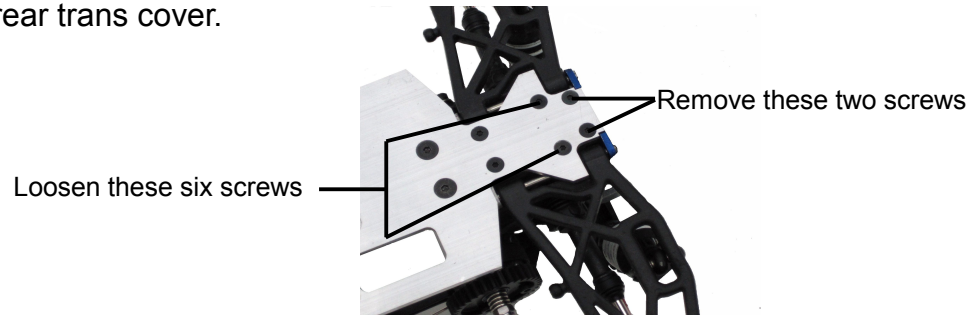

2. There are only 4 screws holding the rear trans cover on. Two underneath and the chassis you just removed and two just underneath the rear shock tower screws. Remove the two upper screws from the rear transmission cover. Next remove the trans cover assembly. Unbolt the old battery box tray and wheely bar assembly from the rear transmission cover.

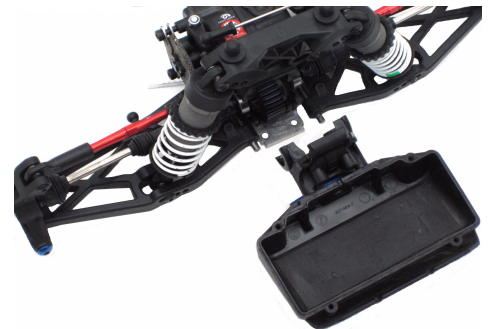

3. Install the rear trans cover and the tie bar onto the new lower wheely bar mount plate. The bolt that goes the inside of the trans case cover that bolts to the tie bar and wheely bar together, use a small drop of red loc-tite. This insure the screw wont vibrate out and ruin the gear set. Make sure the tie bar is straight. Now reinstall the assembly by pushing it in straight until it's all the way in and seated. Now install the two screws underneath the truck and make sure all the screws are tight. This bar is design so you have the option to install a hump pack battery in the back.

